
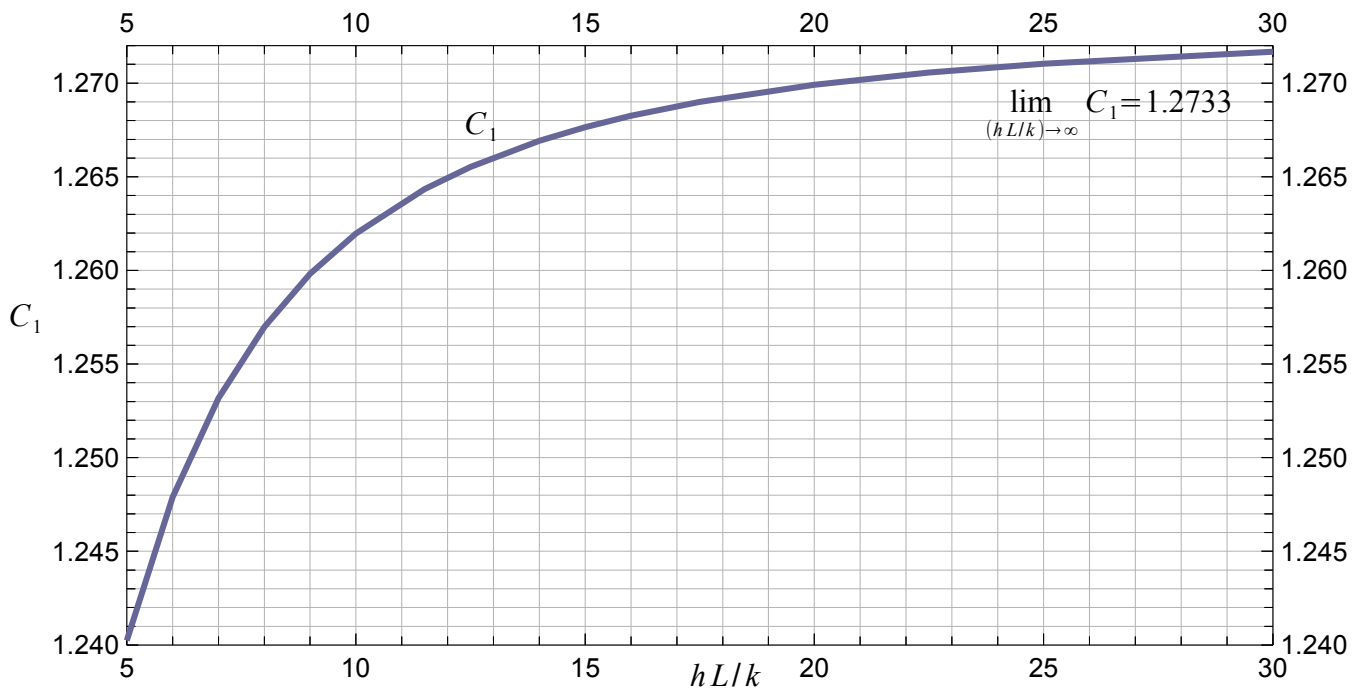
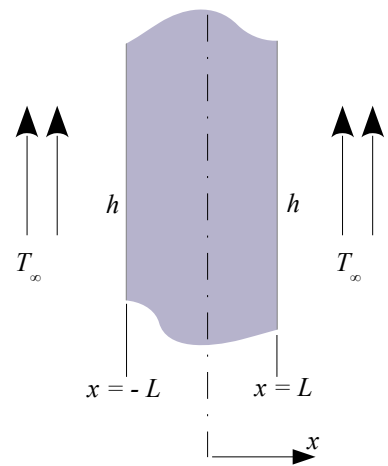


Coefficients  $\zeta_1^2$  and  $C_1$  for transient, 1D heat conduction: Plane Wall, Centerline Temperature  $T_0(t)$

$$T_0(t) = T_\infty + (T_i - T_\infty) C_1 \exp\left[-\zeta_1^2 \frac{\alpha t}{L^2}\right]$$

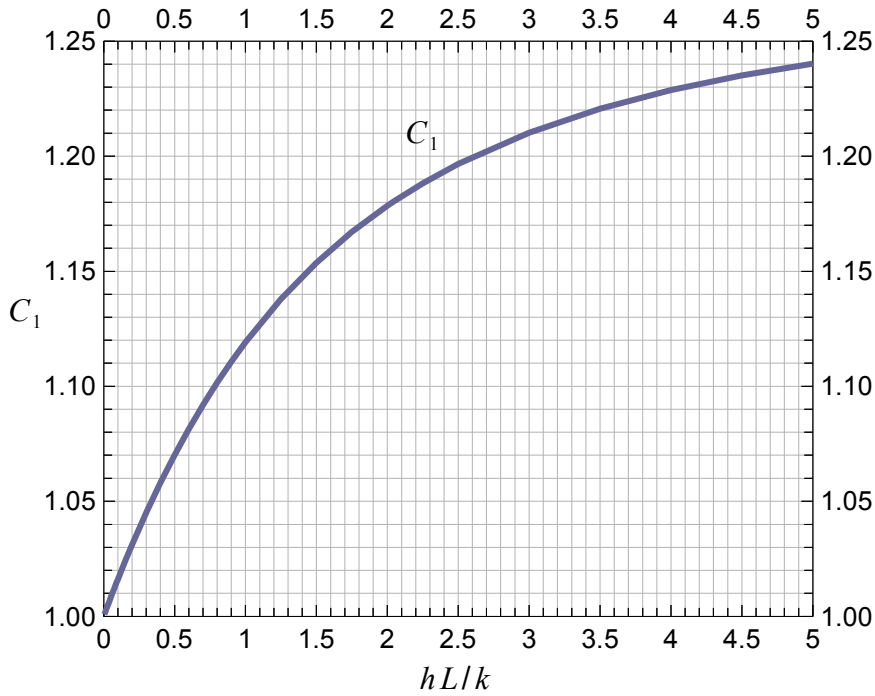

Coefficients  $\zeta_1^2$  and  $C_1$  for transient, 1D heat conduction: Plane Wall, Centerline Temperature  $T_0(t)$

$$T_0(t) = T_\infty + (T_i - T_\infty) C_1 \exp\left[-\zeta_1^2 \frac{\alpha t}{L^2}\right]$$

